

PowerShot S50
DIGITAL CAMERA
Quick Start Guide



This guide explains the required operations the first time the camera is used, how to download images to a computer, as well as connecting to a printer for direct printing. For usage precautions and detailed instructions please refer to the manuals listed above.


Please refer to the *Troubleshooting* section of the *Software Starter Guide* if you have trouble installing the software or downloading images.

Do not connect the camera to the computer before the software is installed.

Step 1 Preparing the Camera


1. Charge the battery pack. (Battery charger types vary by region.)

Place the battery pack in the battery charger and plug the charger into a power outlet. The charge indicator lights red while charging and changes to green when the battery pack is charged. Charging the battery pack takes approximately 80 minutes.

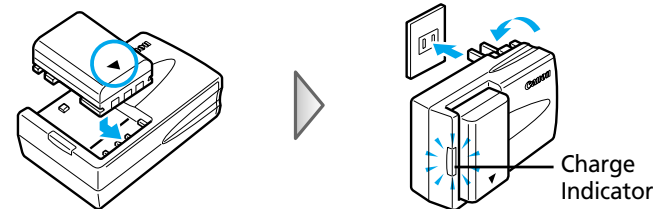


2. Install the battery pack.

Slide the CF card slot/battery cover and open the battery cover. Press the battery lock while inserting the battery pack all the way in.

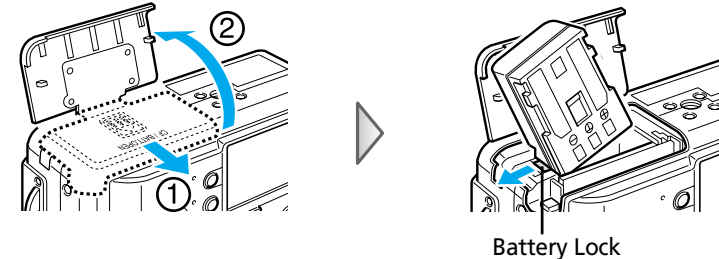

3. Install the CF card.

Insert the CF card with its label facing out until the CF card eject button fully extends and close the CF card slot/battery cover.

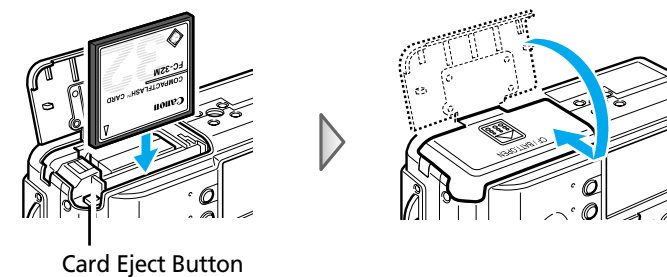

ENGLISH




CDI-E092

- Handling precautions
- Camera's detailed operations
 - Camera User Guide
- Software operations
 - Software Starter Guide
- Detailed software operations
 - ZoomBrowser EX Software User Guide (Windows®)
 - ImageBrowser Software User Guide (Macintosh)

(These PDF format manuals are available on the Canon website. Please download them from the following URL: <http://www.canon.co.jp/imaging/information-e.html>)


Step 2 Shooting

1. Open the lens cover and turn the shooting mode dial to **AUTO**.
The power/mode indicator lights orange.

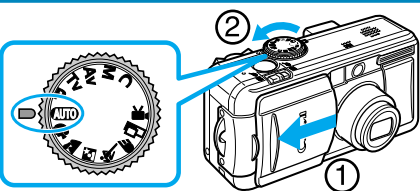


2. Set the date and time. (first time the camera is powered on)

Use ◀ or ▶ on the multicontroller to select the items you wish to set, and use ▲ or ▼ on the multicontroller to change the value. To put the settings into effect, press **SET**.

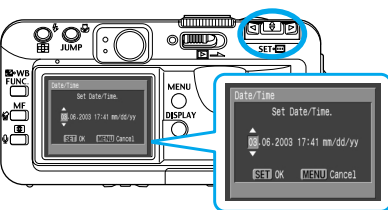


3. Focus.

Point the camera in the direction of the subject you wish to shoot and press the shutter button halfway. The camera beeps twice when the subject is in focus.

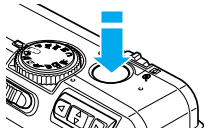


4. Shoot.

Press the shutter button fully. The shutter sound will sound once when the shot has been taken. The recorded image is displayed on the LCD monitor for approximately 2 seconds.

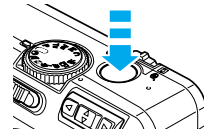

Turn off the power.


Close the lens cover. Even if you do not close the lens cover, the power will automatically shut down 3 minutes after the last control is accessed.

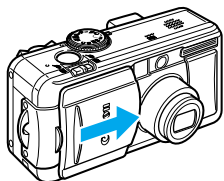

Step 3 Reviewing an Image


1. Slide the power/mode lever to the right.

The power/mode indicator lights green.
The last recorded image appears in the LCD monitor.

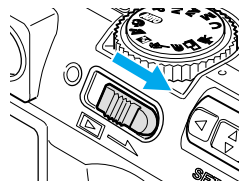


2. View the images.

Use ◀ or ▶ on the multicontroller to display the image you wish to see.

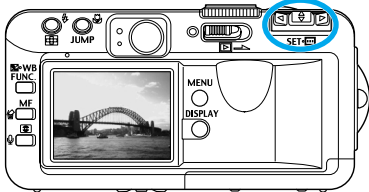


To Delete an Unwanted Image

1. Select the unwanted image using ◀ or ▶ on the multicontroller and press the button.

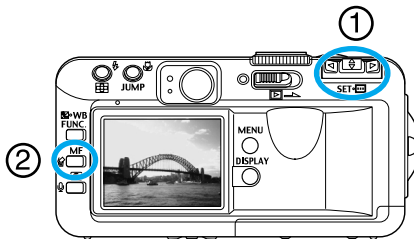

2. When the confirmation screen appears, check that **[Erase]** is selected and press **SET**.

Select **[Cancel]** using ◀ or ▶ on the multicontroller to cancel without erasing.

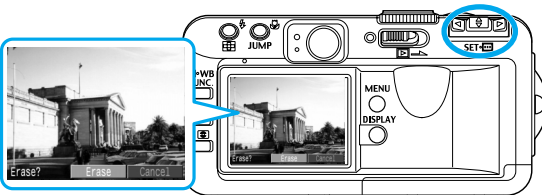


Downloading Images to a Computer

Do not connect the camera to the computer before the software is installed. Follow each step below in order.


List of Things to Prepare

- Camera and computer
- Canon Digital Camera Solution Disk provided with the camera
- USB cable (use the cable provided with the camera)

Steps to Follow

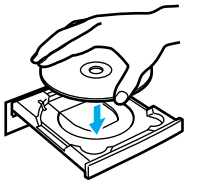


1. Set the Canon Digital Camera Solution Disk in the CD-ROM drive.




2. Install the software from the disk.

For details on software installation, see the *Software Starter Guide* included in your package.

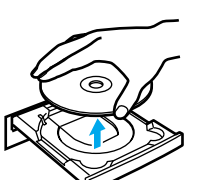


3. After your computer restarts, eject the Solution Disk from the CD-ROM drive.

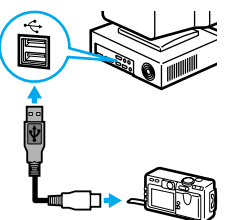

4. Connect the camera to the computer using the USB cable.



5. Start the program.

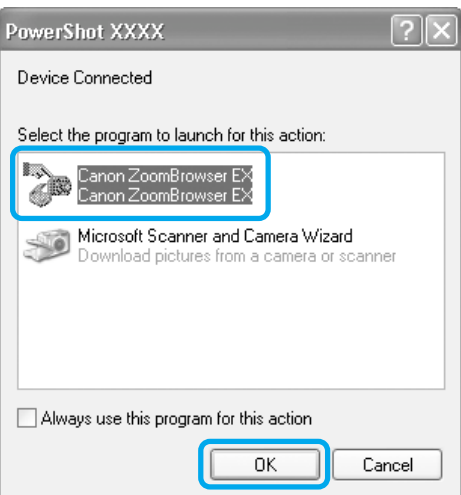
- **Windows***: The Events dialog will automatically display.



Select [Canon ZoomBrowser EX] and click [OK].

* If the above dialog (Events dialog) does not appear automatically, double-click the [ZoomBrowser EX] icon on the desktop.

- **Mac OS X (10.1/10.2):**
 1. If Image Capture or iPhoto are running, click on  in the upper left corner of the window to close the application.
 2. Double-click the [Canon ImageBrowser] icon on the desktop.
- **Mac OS 9.0-9.2:** ImageBrowser will start and open the ImageBrowser Automation wizard.

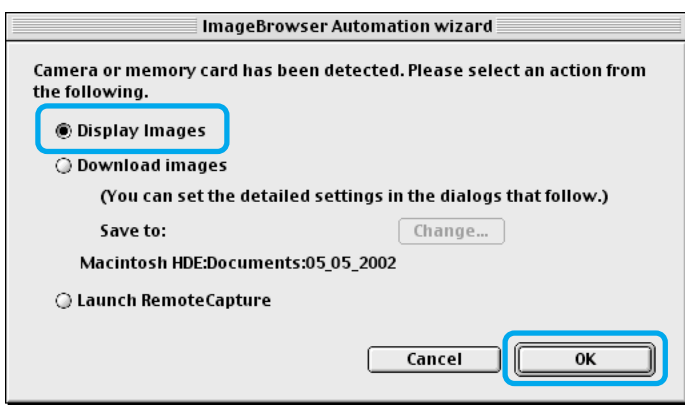

Confirm that [Display Images] is selected and click the [OK] button.

6. Download images to the computer using the program you started.


For details on downloading images, see the *Software Starter Guide* included in your package.

Printing with a Direct Print Compatible Printer (CP Series)

It is easy to print out crisp prints of the images you shoot by connecting your camera directly to a separately sold, direct print compatible printer (CP series) with a cable. For details, please see the user guide for the printer.

You can also print with a separately sold, direct print compatible Bubble Jet printer. For details, please see the user guide included with the Bubble Jet printer.


1. Load the ink cassette and the paper cassette into the printer.

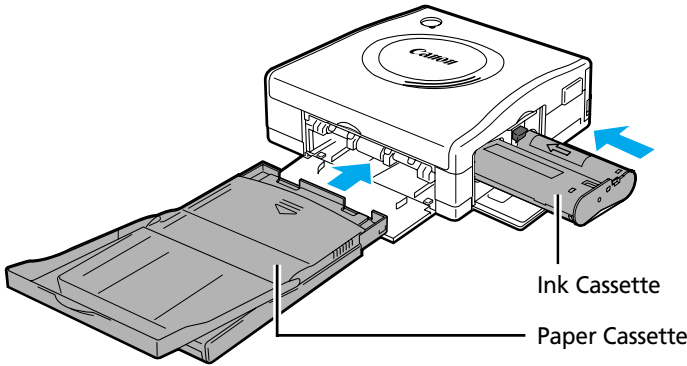


2. Connect the power cord to the printer.

With the CP-10 printer, the printer's power turns on automatically.

3. Connect the camera to the printer and press the printer's ON/OFF button to turn on the power.

-  appears on the camera's LCD monitor and the power/mode indicator lights green.
- If you cannot use the camera's compact power adapter*, please use a fully charged battery pack.

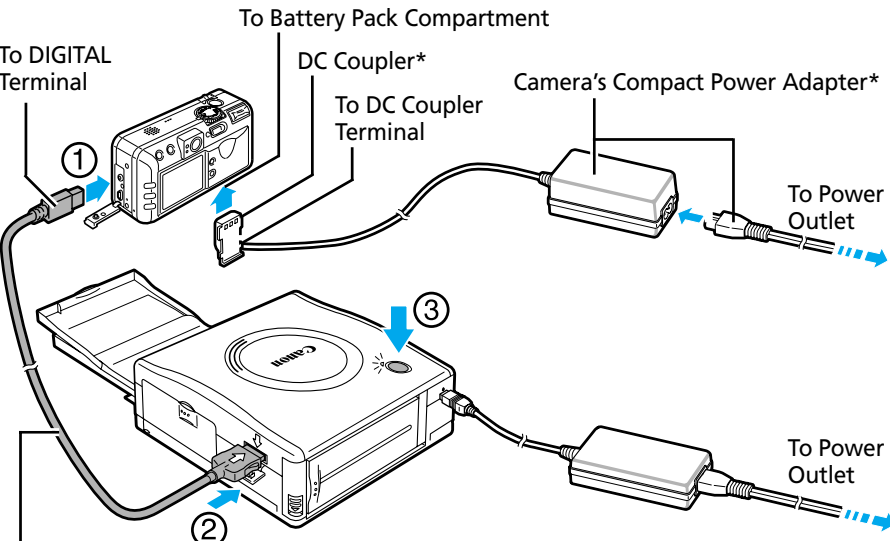

To DIGITAL Terminal

To Battery Pack Compartment

DC Coupler*

To DC Coupler Terminal

Camera's Compact Power Adapter*

To Power Outlet

Direct Interface Cable DIF-100 (Included with the printer)


* Included with the optional AC Adapter Kit ACK700

4. Choose an image using ◀ or ▶ on the multicontroller and press SET.



5. Choose [Print] using ◀, ▶, ▲ or ▼ on the multicontroller and press SET.

The image will start to print and, when it is completely finished, the display will revert to standard replay mode.

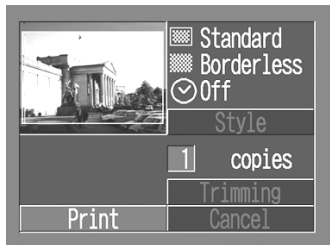

For details on printing images, see the *Camera User Guide* included in your package.